INSTRUCTIONS FOR CHANGING BRUSHES



Changing the brush attachments of the BISAM 44 BRUSH

- Make sure that the power supply is disconnected before changing the brush attachment.
- No tools are needed to change the brush attachment.
- Push the roller brush towards the gearbox (step 1) and pull the brush attachment outwards on the other side (step 2).
- When mounting, place the roller brush on the gear hub and push the brush attachment on the other side into position until it engages.



